


Heating






User Guide



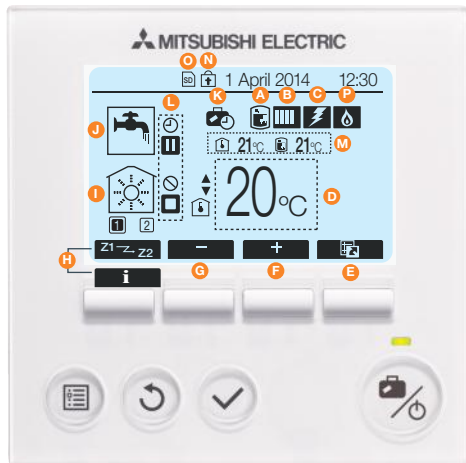














FTC4 Controller

Making a
World of
Difference

FTC4 Controller



Button	Function
 Menu	Access to system settings for initial set up and modifications
 Back	Return to previous menu
 Confirm	Used to select or save (Enter key)
 Power / Holiday Mode	If system is switched off pressing once will turn system on. Pressing again when system is switched on will enable Holiday mode. Holding the button down for 3 secs will turn the system off
 Function keys	Used to scroll through menu and adjust settings. Function is determined by visible menu screen

Main Screen Icons	Description
A Legionella Prevention	When this icon is displayed Legionella prevention mode is active
B Heat Pump	 'Heat Pump' is running  Defrosting  Emergency heating
C Electric Heater	When this icon is displayed the 'Electric Heaters' (booster or immersion heater) are in use
D Target Temperature	 Target flow temperature (Fixed flow temperature)  Target room temperature (Room compensation)  Compensation curve (Weather compensation)
E Summary Screen	Pressing the function button below this icon displays the summary screen
F +	Increase desired temperature
G -	Decrease desired temperature
H Z1 ~ Z2	Pressing the function button below this icon switches between Zone 1 and Zone 2
I Information	Pressing the function button below this icon displays the information screen
J Space Heating Mode	 Heating mode Zone 1 or Zone 2
K DHW Mode	Normal or Eco mode domestic hot water
L Holiday Mode	When this icon is displayed 'Holiday mode' is activated
M Timer	 Timer
N Prohibited	 Prohibited
O Stand-by	 Stand-by
P Stop	 Stop
Q Operating	 Operating
R Current Temperature	 Current room temperature  Current water temperature of DHW tank
S Menu locked	 The Menu button is locked
T SD memory card inserted	 SD memory card is inserted. Normal operation  SD memory card inserted. Abnormal operation
U Boiler	When this icon is displayed, the boiler is in use